
#### DIMENSIONS

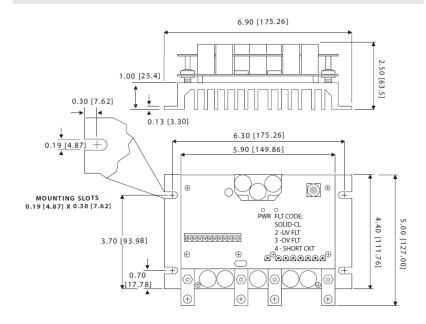

### ALL DIMENSIONS IN INCHES [ MILLIMETERS ]

## SPECIFICATIONS


DC Input Voltage [ V ]	10 - 32
DC Output Volage [ V ]	0 - 100% of Input
Continuous Current [ A ]	120*
1 Minute Peak Current [ A ]	250
Speed Range	80:1
Speed Regulation	1%
Ambient Temperature [ °C ]	0 - 40

- \* Derate by 15% when mounted horizontally.
- \*\* Derate by 20% when mounted horizontally.



# MMP 100A 10-32V

QUICK START GUIDE

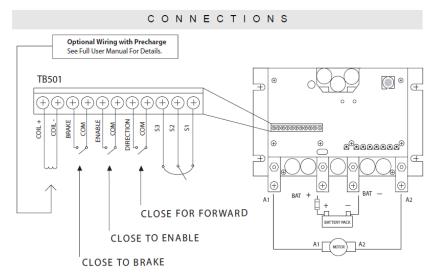

- STEP 1: Connect speed potentiometer along with optional Brake and Direction switches as shown in above diagram.
- STEP 2: Connect motor armature across A1 and A2.
- STEP 3: Connect battery to (BAT + ) and (BAT ), taking note of the polarity. Midwest Motior Products recommends adding a fuse and master power switch external to the drive.
- STEP 4: Connect Enable switch or jumper.

## **LED** Codes

Power: The drive is receiving battery voltage.

Fault:

- -Solid: The drive is in Current Limit.
- -Two Blinks: The drive is in an Under Voltage Trip.
- -Three Blinks: The drive is in an Over Voltage Trip.
- -Four Blinks: The drive is in a Short Circuit Trip.
- -Five Blinks: The drive is in an Overheat Trip.